

Assembly instructions for the poly rattan storage chest




1 x lid




1 x aluminum frame



1 x base

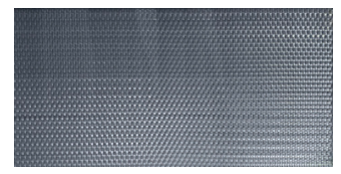

2 x panels
front and rear

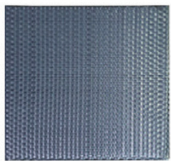

2 x side panels


A 20x Metal screw 3.5 x 13 mm

B 12x Metal screws 3.9 x 13 mm

C 2x Blind screws

D 4x plastic feet

E 2x shock absorbers

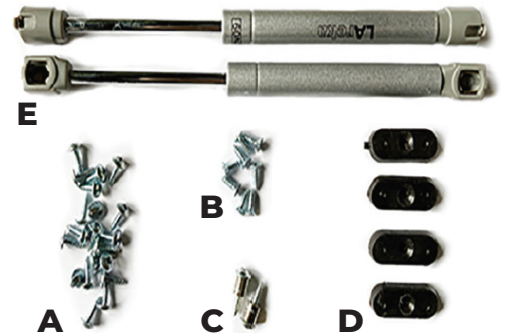

1. Place the bottom part on a straight, flat surface.



2. Insert and align the side parts in the floor profile.




Side panels and base
plate with screws A



Screw the side parts
with screws B.

**3. Place the aluminum frame
on the crate and press down on it.**

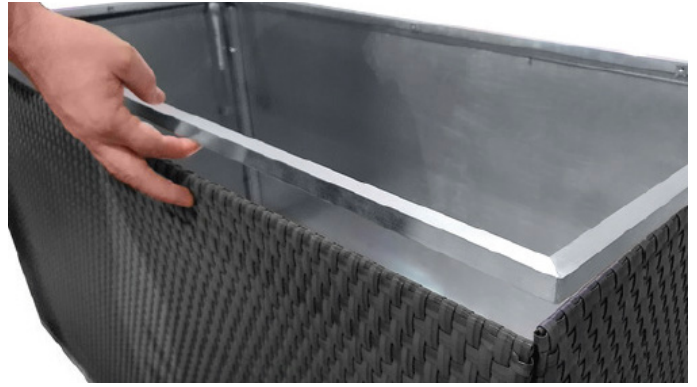

**4. Screw the upper aluminum frame
to the side parts using screws A.
The holes provided for this purpose
are equipped with shims.**



**5. Put the cover on and screw it down
using the screws C provided in the box.**



**6. Secure the shock
absorbers.**



**7. Then turn the chest over and screw
the plastic feet in place using screws B.**

